


DAR Valve Service Bulletin

Installation – Setup – Operation

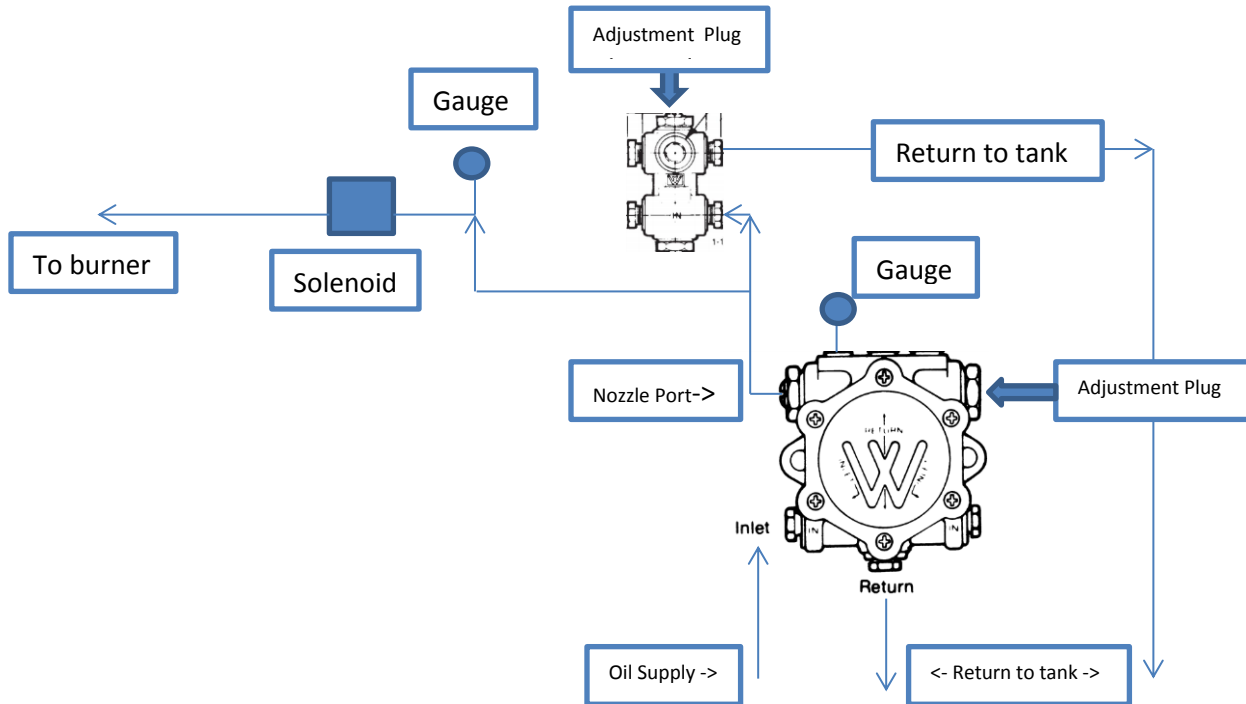

- 1) Power up pump and adjust pump pressure (slowly turn pressure adjustment all the way in)
- 2) With the pump nozzle port blocked... test pump pressure. Dead head pressure gauge at gauge port. Permanently set pump pressure to max. Pressure should be above 350 psi. Reject pump if below.
- 3) Open line to DAR valve. (nozzle port to valve inlet)
- 4) With the pump running adjust DAR valve to the desired pressure setting as indicated on pump gauge. The RV2102-4 has an adjustment range of 100-330. Any valve that does not meet this criteria should be rejected.
- 5) Setup complete