


R & V Pump Number Location

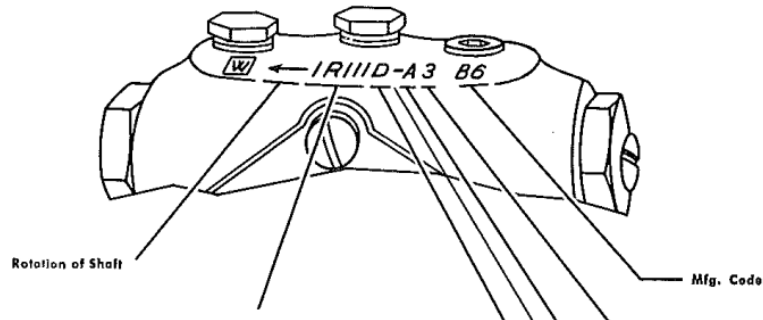

TYPICAL CODE—IR I I I D - A 3 B 6
A B C D E F G H J

- A**
- 1R - Single Stage -1725 RPM
 - 21R - Single Stage -3450 RPM
 - 2R - Two Stage -1725 RPM
 - 22R - Two Stage -3450 RPM
 - 31R - Single Stage -1425 RPM
 - 41R - Single Stage -2850 RPM
 - 32R - Two Stage -1425 RPM
 - 42R - Two Stage -2850 RPM

B Number of Filter Sections 1 thru 6

C Max Rated Pressure (PSI)

Code	Max. Pres.	Factory Set At
1	150 PSI	100 PSI
2	300 PSI	100 PSI
3	20 PSI	10 PSI
4	45 PSI	40 PSI
5	100 PSI	100 PSI
6	125 PSI	100 PSI
8	80 PSI	20 PSI

D Pressure Gear Size 0 thru 8


E Rotation and Porting-
As viewed from Shaft End
A Clockwise Nozzle Port Left
B CCW Nozzle Port Right
C CCW Nozzle Port Left
D CW Nozzle Port Right

F Bypass Plug Access
* Right hand inlet (from front cover)
- Left hand inlet (from front)

G Design Series
Shaft Seal Type
Face Lip
1 4 1 stage or 2 stage w/suction gear same size as pressure gear.
3 5 2 stage w/suction gear one size larger than pressure gear.

H Special Customer Modifications

J Nozzle Outlet Type and Bypass Condition. Final digit even - Factory set for 2-pipe operation. Final digit odd - Factory set for one pipe operation.

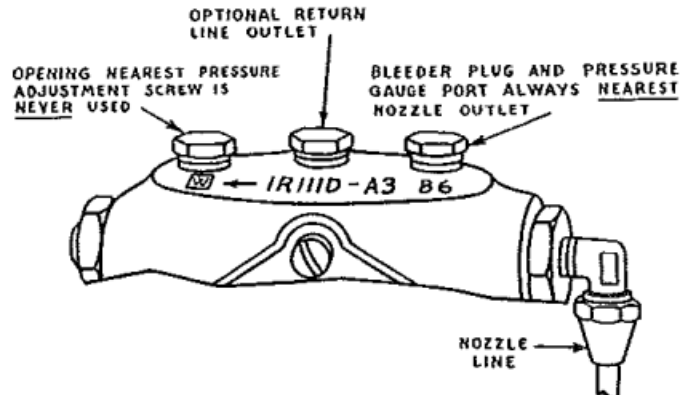

Webster Fuel Pumps & Valves, 219 Hahn Drive, Frankfort, KY. 40601

Phone: 800.766.1233 or 502.223.0025 - Fax: 502.223.4629

www.websterfuelpumps.com